

## **Connection diagram**

Oil temperature gauge for 350Z.

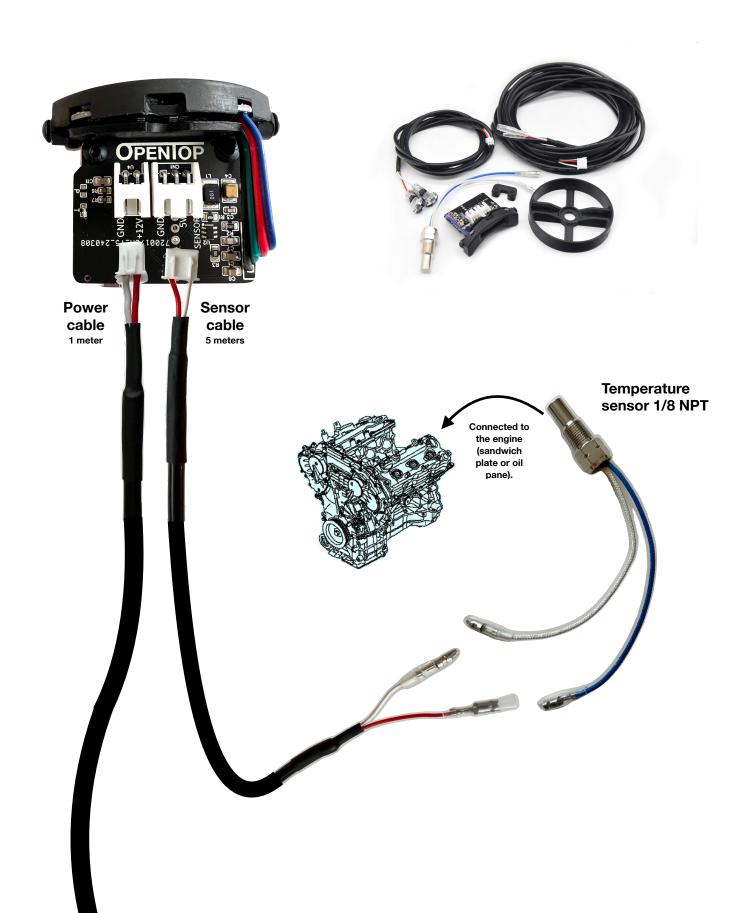

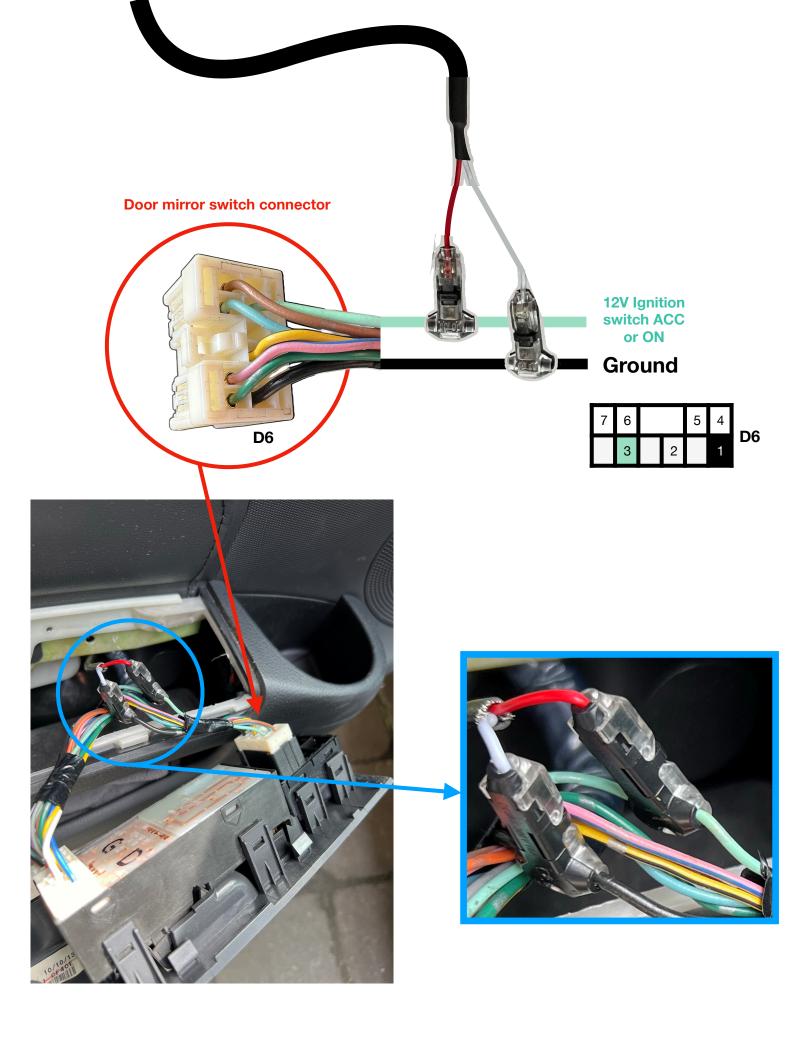



Make a hole in the pipe for the cables to pass through.



Connect the cables to the electronic board, passing through the bottom of the air vent.



Replace the air vent, taking care to position it correctly.